

LibreVNA SCPI Programming Guide

April 12, 2024

Contents

1	Introduction	4
2	SCPI Server Configuration	4
3	General Syntax	4
4	Commands	5
4.1	General Commands	5
4.1.1	*IDN	5
4.1.2	*RST	5
4.1.3	*CLS	5
4.1.4	*ESE	5
4.1.5	*ESR	6
4.1.6	*OPC	6
4.1.7	*WAI	6
4.1.8	*LST	7
4.2	Device Commands	7
4.2.1	DEVIce:DISConnect	7
4.2.2	DEVIce:CONNect	7
4.2.3	DEVIce:LIST	7
4.2.4	DEVIce:MODE	8
4.2.5	DEVIce:SETUP:SAVE	8
4.2.6	DEVIce:SETUP:LOAD	9
4.2.7	DEVIce:REFerence:OUT	9
4.2.8	DEVIce:REFerence:IN	9
4.2.9	DEVIce:STATus:UNLOcked	9
4.2.10	DEVIce:STATus:ADCOVERload	10
4.2.11	DEVIce:STATus:UNLEVel	10
4.2.12	DEVIce:INFo:FWREVisIon	10
4.2.13	DEVIce:INFo:HWREVisIon	10
4.2.14	DEVIce:INFo:TEMPeratures	11
4.2.15	DEVIce:INFo:LIMits:MINFrequency	11
4.2.16	DEVIce:INFo:LIMits:MAXFrequency	11
4.2.17	DEVIce:INFo:LIMits:MINIFBW	11
4.2.18	DEVIce:INFo:LIMits:MAXIFBW	11
4.2.19	DEVIce:INFo:LIMits:MAXPoints	12
4.2.20	DEVIce:INFo:LIMits:MINPOWer	12
4.2.21	DEVIce:INFo:LIMits:MAXPOWer	12
4.2.22	DEVIce:INFo:LIMits:MINRBW	12

4.2.23	DEVIce:INFo:LIMits:MAXRBW	12
4.2.24	DEVIce:INFo:LIMits:MAXHARMonicfrequency	12
4.3	VNA Commands	13
4.3.1	VNA:SWEEP	13
4.3.2	VNA:FREQuency:SPAN	13
4.3.3	VNA:FREQuency:START	13
4.3.4	VNA:FREQuency:CENTEr	14
4.3.5	VNA:FREQuency:STOP	14
4.3.6	VNA:FREQuency:FULL	14
4.3.7	VNA:FREQuency:ZERO	14
4.3.8	VNA:POWEr:START	15
4.3.9	VNA:POWEr:STOP	15
4.3.10	VNA:ACQuisition:IFBW	15
4.3.11	VNA:ACQuisition:POINTS	15
4.3.12	VNA:ACQuisition:AVG	16
4.3.13	VNA:ACQuisition:AVGLEVel	16
4.3.14	VNA:ACQuisition:FINIshed	16
4.3.15	VNA:ACQuisition:LIMit	17
4.3.16	VNA:ACQuisition:SINGLE	17
4.3.17	VNA:STIMulus:LVL	17
4.3.18	VNA:STIMulus:FREQuency	17
4.3.19	VNA:TRACe:LIST	18
4.3.20	VNA:TRACe:DATA	18
4.3.21	VNA:TRACe:AT	19
4.3.22	VNA:TRACe:TOUCHSTONE	19
4.3.23	VNA:TRACe:MAXFrequency	20
4.3.24	VNA:TRACe:MINFrequency	20
4.3.25	VNA:TRACe:MAXAmplitude	20
4.3.26	VNA:TRACe:MINAmplitude	20
4.3.27	VNA:TRACe:NEW	20
4.3.28	VNA:TRACe:RENAME	21
4.3.29	VNA:TRACe:PAUSE	21
4.3.30	VNA:TRACe:RESUME	21
4.3.31	VNA:TRACe:PAUSED	21
4.3.32	VNA:TRACe:DEEMBedding:ACTive	21
4.3.33	VNA:TRACe:DEEMBedding:AVAILable	22
4.3.34	VNA:TRACe:PARAMeter	22
4.3.35	VNA:TRACe:TYPE	22
4.3.36	VNA:CALibration:ACTivate	22
4.3.37	VNA:CALibration:ACTIVE	23
4.3.38	VNA:CALibration:NUMber	23
4.3.39	VNA:CALibration:RESET	23
4.3.40	VNA:CALibration:ADD	23
4.3.41	VNA:CALibration:TYPE	23
4.3.42	VNA:CALibration:PORT	24
4.3.43	VNA:CALibration:STANDARD	24
4.3.44	VNA:CALibration:MEASure	24
4.3.45	VNA:CALibration:BUSY	25
4.3.46	VNA:CALibration:SAVE	25
4.3.47	VNA:CALibration:LOAD	25
4.4	Signal Generator Commands	25


4.4.1	GENerator:FREQuency	25
4.4.2	GENerator:LVL	26
4.4.3	GENerator:PORT	26
4.5	Spectrum Analyzer Commands	26
4.5.1	SA:FREQuency:SPAN	26
4.5.2	SA:FREQuency:START	27
4.5.3	SA:FREQuency:CENTer	27
4.5.4	SA:FREQuency:STOP	27
4.5.5	SA:FREQuency:FULL	28
4.5.6	SA:FREQuency:ZERO	28
4.5.7	SA:ACQuisition:RBW	28
4.5.8	SA:ACQuisition:WINDow	28
4.5.9	SA:ACQuisition:DETEctor	29
4.5.10	SA:ACQuisition:AVG	29
4.5.11	SA:ACQuisition:AVGLEVel	29
4.5.12	SA:ACQuisition:FINished	30
4.5.13	SA:ACQuisition:LIMit	30
4.5.14	SA:ACQuisition:SINGLE	30
4.5.15	SA:ACQuisition:SIGid	30
4.5.16	SA:TRACKing:ENable	31
4.5.17	SA:TRACKing:PORT	31
4.5.18	SA:TRACKing:LVL	31
4.5.19	SA:TRACKing:OFFset	32
4.5.20	SA:TRACKing:NORMAlize:ENable	32
4.5.21	SA:TRACKing:NORMAlize:MEASure	32
4.5.22	SA:TRACKing:NORMAlize:LVL	32
4.5.23	SA:TRACe:LIST	33
4.5.24	SA:TRACe:DATA	33
4.5.25	SA:TRACe:AT	33
4.5.26	SA:TRACe:MAXFrequency	34
4.5.27	SA:TRACe:MINFrequency	34
4.5.28	SA:TRACe:MAXAmplitude	34
4.5.29	SA:TRACe:MINAmplitude	34
4.5.30	SA:TRACe:NEW	34
4.5.31	SA:TRACe:RENAME	35
4.5.32	SA:TRACe:PAUSE	35
4.5.33	SA:TRACe:RESUME	35
4.5.34	SA:TRACe:PAUSED	35
4.5.35	SA:TRACe:PARAMeter	35
4.5.36	SA:TRACe:TYPE	36

1 Introduction

The LibreVNA-GUI contains a TCP server that can be used to control the LibreVNA with SCPI commands.

2 SCPI Server Configuration

The server is configurable in the preferences: `Window >> Preferences >> General`

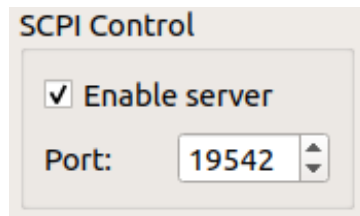

If enabled, it will accept any TCP connection at the configured port. Once the connection is established, it can be used to send SCPI commands and receive replies. Only one connection at a time is possible, if a second connection is created, the first one will be closed by the LibreVNA-GUI. Alternatively, a port can be manually configured by setting the “port” argument:

```
./LibreVNA-GUI --port 1234
```

This enables the SCPI server at the specified port, regardless of what is configured in the preferences (useful for starting multiple instances at different ports at the same time). If no graphical user interface is required, the LibreVNA-GUI can be hidden:

```
./LibreVNA-GUI --port 1234 --no-gui
```

3 General Syntax

The syntax follows the usual SCPI rules:

- All commands are case insensitive (implicitly converted to uppercase before evaluated)
- The command tree is organized in branches, separated by a colon:

```
VNA:TRACE:LIST?
```

- Multiple commands can be concatenated in one line using a semicolon:

```
DEVIce:CONNECT;;DEVIce:INFo:FWRRevision?
```

- If a subsequent command starts with a colon it is evaluated from the root branch, otherwise the last used branch is assumed:

```
VNA:FREQuency:START 1000000;STOP 2000000 #No colon, VNA:FREQuency  
branch was used before
```

- Branches and commands can be abbreviated by using only the uppercase part of their name, the following commands are identical:

```
DEVIce:INFo:LIMits:MINFrequency?  
DEV:INF:LIM:MINF?
```

- Every query generates a response, terminated with a newline character (exceptions exist for a few queries which return more than one line)

- Some commands require additional arguments that have to be passed after the command (separated by spaces):

```
DEV : REF : OUT 10
```

- Two types of commands are available:
 - **Events** change a setting or trigger an action. They have no response
 - **Queries** request information. They end with a question mark.
 Some commands are both events and queries, depending on whether the question mark is present:

```
VNA : FREQ : SPAN 50000000 # Set the span
VNA : FREQ : SPAN ? # Read the current span
```

4 Commands

4.1 General Commands

4.1.1 *IDN

Query:

Effect:	Returns the identifications string
Syntax:	*IDN?
Parameters:	None
Return value:	LibreVNA,LibreVNA-GUI,dummy_serial,<software version>

4.1.2 *RST

Event:

Effect:	Resets the GUI (and any connected device) to the default state
Syntax:	*RST
Parameters:	None

4.1.3 *CLS

Event:

Effect:	Clears the event status register
Syntax:	*CLI
Parameters:	None

4.1.4 *ESE

Event:

Effect:	Configures the event status enable register
Syntax:	*ESE
Parameters:	<enabled_bits_decimal>

Query:

Effect:	Returns the event status enable register
----------------	--

Syntax:	*ESE?
Parameters:	None
Return value:	<enabled_bits_decimal>

4.1.5 *ESR

Query:

Effect:	Returns the event status register
Syntax:	*ESR?
Parameters:	None
Return value:	<set_bits_decimal>

The bits are used according to IEEE 488:

Bitvalue	Name	Meaning
1	OPC	Operation complete
2	RQC	Request control (not used)
4	QYE	Query error (not used)
8	DDE	Device dependent error (not used)
16	EXE	Execution error (not used)
32	CME	Command error
64	URQ	User request (not used)
128	PON	Power on (not used)

4.1.6 *OPC

Event:

Effect:	Sets the OPC bit in the event status register after all operations are complete
Syntax:	*OPC
Parameters:	None

Query:

Effect:	Returns a 1 after every active operation has completed
Syntax:	*OPC?
Parameters:	None
Return value:	1

4.1.7 *WAI

Event:

Effect:	Blocks further command parsing until all active operations are complete
Syntax:	*WAI
Parameters:	None

4.1.8 *LST

Query:

Effect:	Lists all available commands
Syntax:	*LST?
Parameters:	None
Return value:	List of commands, separated by newline

4.2 Device Commands

This section contains general device commands, available regardless of the current mode.

4.2.1 DEVIce:DISConnect

Event:

Effect:	Disconnects from the device
Syntax:	DEVIce:DISConnect
Parameters:	None

4.2.2 DEVIce:CONNect

Event:

Effect:	Connects to a device. If no serialnumber is specified, the connection is made with the first device found
Syntax:	DEVIce:CONNect [<serialnumber>]
Parameters:	<serialnumber> Serialnumber of the device that should be connected

Example

```
:DEV:CONN 206039903350
```

Query:

Effect:	Queries the serial number of the connected device
Syntax:	DEVIce:CONNect?
Parameters:	None
Return value:	<serialnumber> or "Not connected"

Example

```
:DEV:CONN?  
206039903350
```

4.2.3 DEVIce:LIST

Query:

Effect:	Lists all available devices by their serial numbers
Syntax:	DEVIce:LIST?

Parameters:	None
Return value:	List of serialnumbers

Example

```
: DEV : LIST ?
206039903350 , 208939A23350
```

4.2.4 DEVIce:MODE

Event:

Effect:	Switches the device to the specified mode
Syntax:	DEVIce:MODE <mode>
Parameters:	<mode>: VNA: set to vector analyzer GEN: set to signal generator SA: set to spectrum analyzer

Example

```
: DEV : MODE VNA
```

Query:

Effect:	Queries the currently active mode
Syntax:	DEVIce:MODE?
Parameters:	None
Return value:	<mode>: VNA: set to vector analyzer GEN: set to signal generator SA: set to spectrum analyzer

Example

```
: DEV : MODE ?
VNA
```

4.2.5 DEVIce:SETUP:SAVE

Event:

Effect:	Saves the GUI setup to a file
Syntax:	DEVIce:SETUP:SAVE
Parameters:	<filename>

Important points when saving/loading setup files through SCPI commands:

- Filenames must be either absolute or relative to the location of the GUI application.
- If the LibreVNA-GUI (and thus also the SCPI server) is running on a different machine than the SCPI client, the setup files will be saved/loaded from the machine that runs the GUI.
- If no (or a wrong) file ending is specified, “.setup” is automatically added to the filename.

4.2.6 DEVIce:SETUP:LOAD

Query:

Effect:	Loads a setup file
Syntax:	DEVIce:SETUP:LOAD?
Parameters:	<filename>
Return value:	TRUE or FALSE

- Filenames must be either absolute or relative to the location of the GUI application.
- The filename must include the file ending “.setup”.

4.2.7 DEVIce:REFErence:OUT

Event:

Effect:	Sets the reference output frequency
Syntax:	DEVIce:REFErence:OUT <freq>
Parameters:	<freq> in MHz, either 0 (disabled), 10 or 100

Query:

Effect:	Queries the reference output frequency
Syntax:	DEVIce:REFErence:OUT?
Parameters:	None
Return value:	Output frequency in MHz

4.2.8 DEVIce:REFErence:IN

Event:

Effect:	Set the reference input mode
Syntax:	DEVIce:REFErence:IN <mode>
Parameters:	<mode>: INT: use internal reference EXT: use external reference AUTO: automatic reference switching

Query:

Effect:	Queries the reference source
Syntax:	DEVIce:REFErence:IN?
Parameters:	None
Return value:	INT or EXT

4.2.9 DEVIce:STAtus:UNLOCKed

Query:

Effect:	Queries the PLL lock error flag
Syntax:	DEVIce:STAtus:UNLOCKed?
Parameters:	None

Return value:	TRUE or FALSE
----------------------	---------------

4.2.10 DEVIce:STAtus:ADCOVERload

Query:

Effect:	Queries the ADC overload error flag
Syntax:	DEVIce:STAtus:ADCOVERload?
Parameters:	None
Return value:	TRUE or FALSE

4.2.11 DEVIce:STAtus:UNLEVel

Query:

Effect:	Queries the output level error flag
Syntax:	DEVIce:STAtus:UNLEVel?
Parameters:	None
Return value:	TRUE or FALSE

4.2.12 DEVIce:INFo:FWREVIion

Query:

Effect:	Returns the firmware revision of the connected device
Syntax:	DEVIce:INFo:FWREVIion?
Parameters:	None
Return value:	<major>.<minor>.<patch>

Example

```
: DEV : INF : FWREV ?
1 . 0 . 0
```

4.2.13 DEVIce:INFo:HWREVIion

Query:

Effect:	Returns the hardware revision of the connected device
Syntax:	DEVIce:INFo:HWREVIion?
Parameters:	None
Return value:	<revision>, single char

Example

```
: DEV : INF : HWREV ?
B
```

4.2.14 DEVIce:INFo:TEMPeratures

Query:

Effect:	Queries the temperatures of certain chips
Syntax:	DEVIce:INFo:TEMPeratures?
Parameters:	None
Return value:	<source>/<I.LO>/<CPU>

Example

```
: DEV : INF : TEMP ?  
45/51/31
```

4.2.15 DEVIce:INFo:LIMits:MINFrequency

Query:

Effect:	Queries the lowest frequency the device can measure
Syntax:	DEVIce:INFo:LIMits:MINFrequency?
Parameters:	None
Return value:	lowest frequency in Hz

4.2.16 DEVIce:INFo:LIMits:MAXFrequency

Query:

Effect:	Queries the highest frequency the device can measure
Syntax:	DEVIce:INFo:LIMits:MAXFrequency?
Parameters:	None
Return value:	highest frequency in Hz

4.2.17 DEVIce:INFo:LIMits:MINIFBW

Query:

Effect:	Queries the lowest IF bandwidth setting
Syntax:	DEVIce:INFo:LIMits:MINIFBW?
Parameters:	None
Return value:	lowest possible IF bandwidth in Hz

4.2.18 DEVIce:INFo:LIMits:MAXIFBW

Query:

Effect:	Queries the highest IF bandwidth setting
Syntax:	DEVIce:INFo:LIMits:MAXIFBW?
Parameters:	None
Return value:	highest possible IF bandwidth in Hz

4.2.19 DEVIce:INFo:LIMits:MAXPoints

Query:

Effect:	Queries the maximum number of points per sweep
Syntax:	DEVIce:INFo:LIMits:MAXPoints?
Parameters:	None
Return value:	maximum number of points

4.2.20 DEVIce:INFo:LIMits:MINPOWer

Query:

Effect:	Queries the minimum output power
Syntax:	DEVIce:INFo:LIMits:MINPOWer?
Parameters:	None
Return value:	minimum output power in dBm

4.2.21 DEVIce:INFo:LIMits:MAXPOWer

Query:

Effect:	Queries the maximum output power
Syntax:	DEVIce:INFo:LIMits:MAXPOWer?
Parameters:	None
Return value:	maximum output power in dBm

4.2.22 DEVIce:INFo:LIMits:MINRBW

Query:

Effect:	Queries the lowest resolution bandwidth setting
Syntax:	DEVIce:INFo:LIMits:MINRBW?
Parameters:	None
Return value:	lowest possible resolution bandwidth in Hz

4.2.23 DEVIce:INFo:LIMits:MAXRBW

Query:

Effect:	Queries the highest resolution bandwidth setting
Syntax:	DEVIce:INFo:LIMits:MAXRBW?
Parameters:	None
Return value:	highest possible resolution bandwidth in Hz

4.2.24 DEVIce:INFo:LIMits:MAXHARMonicfrequency

Query:

Effect:	Queries the (theoretical) maximum frequency when using harmonic mixing in VNA mode
Syntax:	DEVIce:INFo:LIMits:MAXHARMonicfrequency?
Parameters:	None

Return value:	maximum frequency in Hz
----------------------	-------------------------

4.3 VNA Commands

These commands change or query VNA settings. Although most of them are available regardless of the current device mode, they usually only have an effect once the VNA mode is active (e.g. it is possible to change the span while in signal generator mode but it does not effect the LibreVNA until the mode is switched to VNA). Certain commands (like taking a calibration measurement) are only available in VNA mode and will return an error if another mode is active.

4.3.1 VNA:SWEEP

Event:

Effect:	Sets the type of the sweep
Syntax:	VNA:SWEEP
Parameters:	<type>, either FREQUENCY or POWER

Query:

Effect:	Queries the currently selected type
Syntax:	VNA:SWEEP?
Parameters:	None
Return value:	<type>, either FREQUENCY or POWER

4.3.2 VNA:FREQuency:SPAN

Event:

Effect:	Sets the span of the sweep
Syntax:	VNA:FREQuency:SPAN
Parameters:	, in Hz

Query:

Effect:	Queries the currently selected span
Syntax:	VNA:FREQuency:SPAN?
Parameters:	None
Return value:	span in Hz

4.3.3 VNA:FREQuency:START

Event:

Effect:	Sets the start frequency of the sweep
Syntax:	VNA:FREQuency:START
Parameters:	<start frequency>, in Hz

Query:

Effect:	Queries the currently selected start frequency
----------------	--

Syntax:	VNA:FREQuency:START?
Parameters:	None
Return value:	start frequency in Hz

4.3.4 VNA:FREQuency:CENTer

Event:

Effect:	Sets the center frequency of the sweep
Syntax:	VNA:FREQuency:CENTer
Parameters:	<center frequency>, in Hz

Query:

Effect:	Queries the currently selected center frequency
Syntax:	VNA:FREQuency:CENTer?
Parameters:	None
Return value:	center frequency in Hz

4.3.5 VNA:FREQuency:STOP

Event:

Effect:	Sets the stop frequency of the sweep
Syntax:	VNA:FREQuency:STOP
Parameters:	<stop frequency>, in Hz

Query:

Effect:	Queries the currently selected stop frequency
Syntax:	VNA:FREQuency:STOP?
Parameters:	None
Return value:	stop frequency in Hz

4.3.6 VNA:FREQuency:FULL

Event:

Effect:	Sets the device to the maximum span possible
Syntax:	VNA:FREQuency:FULL
Parameters:	None

4.3.7 VNA:FREQuency:ZERO

Event:

Effect:	Sets the device to zero span mode
Syntax:	VNA:FREQuency:ZERO
Parameters:	None

4.3.8 VNA:POWer:START

Event:

Effect:	Sets the start power of the power sweep
Syntax:	VNA:POWer:START
Parameters:	<start power>, in dBm

Query:

Effect:	Queries the currently selected start power
Syntax:	VNA:POWer:START?
Parameters:	None
Return value:	start power in dBm

4.3.9 VNA:POWer:STOP

Event:

Effect:	Sets the stop power of the power sweep
Syntax:	VNA:POWer:STOP
Parameters:	<stop power>, in dBm

Query:

Effect:	Queries the currently selected stop power
Syntax:	VNA:POWer:STOP?
Parameters:	None
Return value:	stop power in dBm

4.3.10 VNA:ACQquisition:IFBW

Event:

Effect:	Sets the IF bandwidth
Syntax:	VNA:ACQquisition:IFBW
Parameters:	<IF bandwidth>, in Hz

Query:

Effect:	Queries the currently selected IF bandwidth
Syntax:	VNA:ACQquisition:IFBW?
Parameters:	None
Return value:	IF bandwidth in Hz

4.3.11 VNA:ACQquisition:POINTS

Event:

Effect:	Sets the number of points per sweep
Syntax:	VNA:ACQquisition:POINTS
Parameters:	<points>

Query:

Effect:	Queries the currently selected number of points
Syntax:	VNA:ACQquisition:POINTS?
Parameters:	None
Return value:	points

4.3.12 VNA:ACQquisition:AVG

Event:

Effect:	Sets the number of sweeps over which a moving average is calculated
Syntax:	VNA:ACQquisition:AVG
Parameters:	<averaging sweeps>

Query:

Effect:	Queries the currently configured number of sweeps
Syntax:	VNA:ACQquisition:AVG?
Parameters:	None
Return value:	<averaging sweeps>

4.3.13 VNA:ACQquisition:AVGLEVel

Query:

Effect:	Queries the number of sweeps that have been acquired by the average function.
Syntax:	VNA:ACQquisition:AVGLEVel?
Parameters:	None
Return value:	<acquired sweeps>

<acquired sweeps> resets to zero whenever a setting is changed. It is incremented at the end of each sweep, but will not go above the number of configured sweeps for the averaging.

Example (assuming <averaging sweep> = 3):

# of active sweep	<acquired sweeps>
1	0
2	1
3	2
4	3
5	3

4.3.14 VNA:ACQquisition:FINished

Query:

Effect:	Queries whether the average filter has reached a steady state (that is <acquired sweeps> = <averaging sweeps>)
Syntax:	VNA:ACQquisition:FINished?
Parameters:	None

Return value:	TRUE or FALSE
----------------------	---------------

4.3.15 VNA:ACquisition:LIMit

Query:

Effect:	Queries the status of limits that maybe set up on any graph
Syntax:	VNA:ACquisition:LIMit?
Parameters:	None
Return value:	PASS or FAIL

4.3.16 VNA:ACquisition:SINGLE

Event:

Effect:	Configures the VNA for single or continuous sweep
Syntax:	VNA:ACquisition:SINGLE
Parameters:	TRUE or FALSE

Query:

Effect:	Queries whether the VNA is set up for single sweep
Syntax:	VNA:ACquisition:SINGLE?
Parameters:	None
Return value:	TRUE or FALSE

If single sweep is enabled, the acquisition is stopped when the required number of averages have been reached. There are two ways to trigger a new sweep:

- Change any sweep setting (e.g. center frequency)
- Issue the command again (i.e. VNA:ACQ:SINGLE TRUE always triggers a new sweep)

4.3.17 VNA:STIMulus:LVL

Event:

Effect:	Sets the output power of the stimulus signal when sweep type is frequency
Syntax:	VNA:STIMulus:LVL
Parameters:	<power>, in dBm

Query:

Effect:	Queries the currently selected output power
Syntax:	VNA:STIMulus:LVL?
Parameters:	None
Return value:	power in dBm

4.3.18 VNA:STIMulus:FREQuency

Event:

Effect:	Sets the frequency of the stimulus signal when sweep type is power
Syntax:	VNA:STIMulus:FREQuency

Parameters:	<freq>, in Hz
--------------------	---------------

Query:

Effect:	Queries the currently selected frequency
Syntax:	VNA:STIMulus:FREQuency?
Parameters:	None
Return value:	frequency in Hz

4.3.19 VNA:TRACe:LIST

Query:

Effect:	Lists the names of all available traces
Syntax:	VNA:TRACe:LIST?
Parameters:	None
Return value:	comma-separated list of trace name

Example

```
VNA:TRAC:LIST?
S11,S12,S21,S22
```

4.3.20 VNA:TRACe:DATA

Query:

Effect:	Returns the data of a trace
Syntax:	VNA:TRACe:DATA?
Parameters:	<trace>, either by name or by index
Return value:	comma-separated list of tuples [x, real(y), imag(y)]

Depending on the sweep and possible configured math operations, x may be either frequency, power or time.

Example

```
:VNA:TRAC:DATA? S11
[1e+6,0.400172,0.0377869],
[6.67556e+8,-0.0922281,-0.00990373],
[1.33411e+9,-0.0341439,-0.0331184],
[2.00067e+9,0.00750893,0.0490847],
[2.66722e+9,0.0472666,-0.175552],
[3.33378e+9,-0.106545,-0.00952825],
[4.00033e+9,-0.102039,0.0890605],
[4.66689e+9,0.0464292,0.118183],
[5.33344e+9,0.13223,-0.00780554],
[6e+9,-0.0314859,-0.246024]
```

Note: actual response will not include newlines between data points, only at the end

4.3.21 VNA:TRACe:AT

Query:

Effect:	Returns the data at a specific frequency (possibly interpolated)
Syntax:	VNA:TRACe:AT?
Parameters:	<trace>, either by name or by index <frequency>, in Hz
Return value:	real,imag (or “NaN,NaN” if specified frequency is invalid)

Example

```
:VNA:TRAC:AT? S11 1200000000
-0.0458452, -0.028729
```

4.3.22 VNA:TRACe:TOUCHSTONE

Query:

Effect:	Returns the content of multiple trace according to the touchstone format
Syntax:	VNA:TRACe:TOUCHSTONE?
Parameters:	<trace1>,<trace2>,<trace3>,...
Return value:	Touchstone file content in ASCII

Some additional constraints apply:

- The number of specified traces must be a square number. The number of ports in the touchstone file is inferred from that.
- Only frequency domain traces are allowed.
- All traces must have the same number of points and the same start/stop frequency.
- The order in which the traces are specified matters and depending on its index and each trace must be a reflection or transmission measurement:
 - Assuming that n is the number of ports of the desired touchstone file, the $n * n$ number of traces must be specified in this order:

$$S_{11}...S_{1n}, S_{21}...S_{2n}, \dots, S_{n1}...S_{nn}$$

- For every trace S_{ij} , the trace must contain a reflection measurement if $i = j$ and a transmission measurement if $i \neq j$.
- Traces can be specified either by name or by index.
- A deviation from any of these points (invalid number of traces, non-existing trace, wrong order, ...) will result in an error being returned.

Example

```
:VNA:TRACE:TOUCHSTONE? S11 S12 S21 S22
# GHZ S RI R 50
1.000000000000 1.000497817993 0.010679213330 0.000013886895
-0.000054684886 -0.000023392624 -0.000021111371
0.401717424393 0.702864229679
1.002000000000 1.000323534012 0.010577851906 -0.000011075452
-0.000013504875 0.000000477609 -0.000007789199
0.413144201040 0.696514129639
...
```

4.3.23 VNA:TRACe:MAXFrequency

Query:

Effect:	Returns the highest frequency contained in the trace
Syntax:	VNA:TRACe:MAXFrequency?
Parameters:	<trace>, either by name or by index
Return value:	maximum frequency in Hz

4.3.24 VNA:TRACe:MINFrequency

Query:

Effect:	Returns the lowest frequency contained in the trace
Syntax:	VNA:TRACe:MINFrequency?
Parameters:	<trace>, either by name or by index
Return value:	maximum frequency in Hz

4.3.25 VNA:TRACe:MAXAmplitude

Query:

Effect:	Returns the datapoint with the highest amplitude in the trace
Syntax:	VNA:TRACe:MAXAmplitude?
Parameters:	<trace>, either by name or by index
Return value:	<frequency>,<real>,<imag> of the highest amplitude point

Example

```
:VNA:TRAC:MAXA? S21
5.66406e+9,-6.21766e-5,-0.000795846
```

4.3.26 VNA:TRACe:MINAmplitude

Query:

Effect:	Returns the datapoint with the lowest amplitude in the trace
Syntax:	VNA:TRACe:MINAmplitude?
Parameters:	<trace>, either by name or by index
Return value:	<frequency>,<real>,<imag> of the lowest amplitude point

4.3.27 VNA:TRACe:NEW

Event:

Effect:	Creates a new trace
Syntax:	VNA:TRACe:NEW
Parameters:	<trace name>

4.3.28 VNA:TRACe:RENAME

Event:

Effect:	Changes the name of a trace
Syntax:	VNA:TRACe:RENAME
Parameters:	<trace>, either by name or by index <new name>

4.3.29 VNA:TRACe:PAUSE

Event:

Effect:	Pauses (freezes) a trace
Syntax:	VNA:TRACe:PAUSE
Parameters:	<trace>, either by name or by index

4.3.30 VNA:TRACe:RESUME

Event:

Effect:	Resumes (unfreezes) a trace
Syntax:	VNA:TRACe:RESUME
Parameters:	<trace>, either by name or by index

4.3.31 VNA:TRACe:PAUSED

Query:

Effect:	Queries whether a trace is paused
Syntax:	VNA:TRACe:PAUSED?
Parameters:	<trace>, either by name or by index
Return value:	TRUE or FALSE

4.3.32 VNA:TRACe:DEEMBedding:ACTive

Event:

Effect:	Enables/disables de-embedding on a trace
Syntax:	VNA:TRACe:DEEMBedding:ACTive
Parameters:	<trace>, either by name or by index <enable>, either TRUE or FALSE

If no de-embedding is configured for the selected trace, enabling the de-embedding will fail.

Query:

Effect:	Queries whether de-embedding is active for the selected trace
Syntax:	VNA:TRACe:DEEMBedding:ACTive?
Parameters:	<trace>, either by name or by index
Return value:	TRUE or FALSE

4.3.33 VNA:TRACe:DEEMBedding:AVAILable

Query:

Effect:	Queries whether de-embedding is available for the selected trace
Syntax:	VNA:TRACe:DEEMBedding:AVAILable?
Parameters:	<trace>, either by name or by index
Return value:	TRUE or FALSE

4.3.34 VNA:TRACe:PARAMeter

Event:

Effect:	Sets the measurement parameter that is stored in the trace
Syntax:	VNA:TRACe:PARAMeter
Parameters:	<trace>, either by name or by index <parameter>, options are S11, S12, S21 or S22

Query:

Effect:	Queries the measurement parameter of a trace
Syntax:	VNA:TRACe:PARAMeter?
Parameters:	<trace>, either by name or by index
Return value:	S11, S12, S21 or S22

4.3.35 VNA:TRACe:TYPE

Event:

Effect:	Sets the storage type of a trace
Syntax:	VNA:TRACe:TYPE
Parameters:	<trace>, either by name or by index <type>, options are OVERWRITE, MAXHOLD or MINHOLD

Query:

Effect:	Queries the storage type of a trace
Syntax:	VNA:TRACe:TYPE?
Parameters:	<trace>, either by name or by index
Return value:	OVERWRITE, MAXHOLD or MINHOLD

4.3.36 VNA:CALibration:ACTivate

Event:

Effect:	Activates a specific calibration. This command fails if the required measurements have not been taken yet
Syntax:	VNA:CALibration:ACTivate
Parameters:	<type>

Query:

Effect:	Queries the currently available calibration types
Syntax:	VNA:CALibration:ACTivate?
Parameters:	None
Return value:	comma-separated list of available calibration types

4.3.37 VNA:CALibration:ACTIVE

Query:

Effect:	Queries the currently active calibration type
Syntax:	VNA:CALibration:ACTIVE?
Parameters:	None
Return value:	Currently active calibration type

4.3.38 VNA:CALibration:NUMBER

Query:

Effect:	Queries the number of available calibration measurements
Syntax:	VNA:CALibration:NUMBER?
Parameters:	None
Return value:	<number of configured measurements>

4.3.39 VNA:CALibration:RESET

Event:

Effect:	Resets the calibration. Deactivates the calibration and deletes all measurements.
Syntax:	VNA:CALibration:RESET
Parameters:	None

4.3.40 VNA:CALibration:ADD

Event:

Effect:	Adds a new empty calibration measurement.
Syntax:	VNA:CALibration:ADD
Parameters:	<type> Measurement type, one of: OPEN SHORT LOAD THROUGH ISOLATION [<standard>], calibration kit standard name, optional

4.3.41 VNA:CALibration:TYPE

Query:

Effect:	Returns the type of the specified measurement
Syntax:	VNA:CALibration:TYPE?

Parameters:	<measurement number>
Return value:	Measurement type, one of: OPEN SHORT LOAD THROUGH ISOLATION

4.3.42 VNA:CALibration:PORT

Event:

Effect:	Sets the port for the specified measurement
Syntax:	VNA:CALibration:PORT
Parameters:	<measurement number> <port number>

Query:

Effect:	Returns the port for the specified measurement
Syntax:	VNA:CALibration:PORT?
Parameters:	<measurement number>
Return value:	<port number>

4.3.43 VNA:CALibration:STANDARD

Event:

Effect:	Sets the calibration standard which will be used for the specified measurement
Syntax:	VNA:CALibration:STANDARD
Parameters:	<measurement number> <standard name>

Query:

Effect:	Returns the standard name for the specified measurement
Syntax:	VNA:CALibration:STANDARD?
Parameters:	<measurement number>
Return value:	Name of used calibration standard (from calibration kit)

4.3.44 VNA:CALibration:MEASure

Event:

Effect:	Starts a calibration measurement. This command fails if no device is connected, the VNA mode is not active or a calibration measurement is already in progress.
Syntax:	VNA:CALibration:MEASure
Parameters:	<measurement 1>,<measurement 2>,...

Any number of measurements can be specified (by their number). These measurements will be taken simultaneously. This only works if they are measuring different ports (e.g. measure SHORT on port 1 and OPEN on port 2). If colliding measurements are specified (e.g. SHORT on port 1 and LOAD on port 1), an error is returned and no measurements are started.

4.3.45 VNA:CALibration:BUSY

Query:

Effect:	Queries whether a calibration measurement is ongoing
Syntax:	VNA:CALibration:BUSY?
Parameters:	None
Return value:	TRUE or FALSE

4.3.46 VNA:CALibration:SAVE

Event:

Effect:	Saves the active calibration to a file
Syntax:	VNA:CALibration:SAVE
Parameters:	<filename>

Important points when saving/loading calibration files through SCPI commands:

- Filenames must be either absolute or relative to the location of the GUI application.
- If the LibreVNA-GUI (and thus also the SCPI server) is running on a different machine than the SCPI client, the calibration files will be saved/loaded from the machine that runs the GUI.

4.3.47 VNA:CALibration:LOAD

Query:

Effect:	Loads a calibration file
Syntax:	VNA:CALibration:LOAD?
Parameters:	<filename>
Return value:	TRUE or FALSE

4.4 Signal Generator Commands

These commands change or query signal generator settings. Although most of them are available regardless of the current device mode, they usually only have an effect once the generator mode is active.

4.4.1 GENerator:FREQUENCY

Event:

Effect:	Sets the output frequency
Syntax:	GENerator:FREQUENCY
Parameters:	<frequency>, in Hz

Query:

Effect:	Queries the selected output frequency
Syntax:	GENerator:FREQUENCY?
Parameters:	None
Return value:	frequency in Hz

4.4.2 GENERator:LVL

Event:

Effect:	Sets the output power
Syntax:	GENERator:LVL
Parameters:	<output level>, in dBm

Query:

Effect:	Queries the selected output power
Syntax:	GENERator:LVL?
Parameters:	None
Return value:	output level in dBm

4.4.3 GENERator:PORT

Event:

Effect:	Sets the active output port
Syntax:	GENERator:PORT
Parameters:	<output port> 0: output disabled 1: output signal at port 1 2: output signal at port 2

Query:

Effect:	Queries the selected output
Syntax:	GENERator:PORT?
Parameters:	None
Return value:	output port

4.5 Spectrum Analyzer Commands

These commands change or query spectrum analyzer settings. Although most of them are available regardless of the current device mode, they usually only have an effect once the spectrum analyzer mode is active.

4.5.1 SA:FREQuency:SPAN

Event:

Effect:	Sets the span of the sweep
Syntax:	SA:FREQuency:SPAN
Parameters:	, in Hz

Query:

Effect:	Queries the currently selected span
Syntax:	SA:FREQuency:SPAN?
Parameters:	None

Return value:	span in Hz
----------------------	------------

4.5.2 SA:FREQUENCY:START

Event:

Effect:	Sets the start frequency of the sweep
Syntax:	SA:FREQUENCY:START
Parameters:	<start frequency>, in Hz

Query:

Effect:	Queries the currently selected start frequency
Syntax:	SA:FREQUENCY:START?
Parameters:	None
Return value:	start frequency in Hz

4.5.3 SA:FREQUENCY:CENTER

Event:

Effect:	Sets the center frequency of the sweep
Syntax:	SA:FREQUENCY:CENTER
Parameters:	<center frequency>, in Hz

Query:

Effect:	Queries the currently selected center frequency
Syntax:	SA:FREQUENCY:CENTER?
Parameters:	None
Return value:	center frequency in Hz

4.5.4 SA:FREQUENCY:STOP

Event:

Effect:	Sets the stop frequency of the sweep
Syntax:	SA:FREQUENCY:STOP
Parameters:	<stop frequency>, in Hz

Query:

Effect:	Queries the currently selected stop frequency
Syntax:	SA:FREQUENCY:STOP?
Parameters:	None
Return value:	stop frequency in Hz

4.5.5 SA:FREQuency:FULL

Event:

Effect:	Sets the device to the maximum span possible
Syntax:	SA:FREQuency:FULL
Parameters:	None

4.5.6 SA:FREQuency:ZERO

Event:

Effect:	Sets the device to zero span mode
Syntax:	SA:FREQuency:ZERO
Parameters:	None

4.5.7 SA:ACQuisition:RBW

Event:

Effect:	Sets the resolution bandwidth
Syntax:	SA:ACQuisition:IFBW
Parameters:	<resolution bandwidth>, in Hz

Query:

Effect:	Queries the currently selected resolution bandwidth
Syntax:	SA:ACQuisition:IFBW?
Parameters:	None
Return value:	resolution bandwidth in Hz

4.5.8 SA:ACQuisition:WINDow

Event:

Effect:	Sets the type of window used in the acquisition
Syntax:	SA:ACQuisition:WINDow
Parameters:	<windowtype> NONE KAISER HANN FLATTOP

Query:

Effect:	Queries the currently selected type of window
Syntax:	SA:ACQuisition:WINDow?
Parameters:	None
Return value:	NONE, KAISER, HANN or FLATTOP

4.5.9 SA:ACQuisition:DETECTOR

Event:

Effect:	Sets the detector type
Syntax:	SA:ACQuisition:DETECTOR
Parameters:	<detector> +PEAK -PEAK NORMAL SAMPLE AVERAGE

Query:

Effect:	Queries the currently selected detector type
Syntax:	SA:ACQuisition:DETECTOR?
Parameters:	None
Return value:	+PEAK, -PEAK, NORMAL, SAMPLE or AVERAGE

4.5.10 SA:ACQuisition:AVG

Event:

Effect:	Sets the number of sweeps over which a moving average is calculated
Syntax:	SA:ACQuisition:AVG
Parameters:	<sweeps>

Query:

Effect:	Queries the currently configured number of sweeps
Syntax:	SA:ACQuisition:AVG?
Parameters:	None
Return value:	sweeps

4.5.11 SA:ACQuisition:AVGLEVEL

Query:

Effect:	Queries the number of sweeps that have been acquired by the average function.
Syntax:	SA:ACQuisition:AVGLEVEL?
Parameters:	None
Return value:	<acquired sweeps>

<acquired sweeps> resets to zero whenever a setting is changed. It is incremented at the end of each sweep, but will not go above the number of configured sweeps for the averaging.

Example (assuming <averaging sweep> = 3):

# of active sweep	<acquired sweeps>
1	0
2	1
3	2
4	3

4.5.12 SA:ACquisition:FINished

Query:

Effect:	Queries whether the average filter has reached a steady state (that is <acquired sweeps> = <averaging sweeps>)
Syntax:	SA:ACquisition:FINished?
Parameters:	None
Return value:	TRUE or FALSE

4.5.13 SA:ACquisition:LIMit

Query:

Effect:	Queries the status of limits that maybe set up on any graph
Syntax:	SA:ACquisition:LIMit?
Parameters:	None
Return value:	PASS or FAIL

4.5.14 SA:ACquisition:SINGLE

Event:

Effect:	Configures the spectrum analyzer for single or continuous sweep
Syntax:	SA:ACquisition:SINGLE
Parameters:	TRUE or FALSE

Query:

Effect:	Queries whether the spectrum analyzer is set up for single sweep
Syntax:	SA:ACquisition:SINGLE?
Parameters:	None
Return value:	TRUE or FALSE

If single sweep is enabled, the acquisition is stopped when the required number of averages have been reached. There are two ways to trigger a new sweep:

- Change any sweep setting (e.g. center frequency)
- Issue the command again (i.e. SA:ACQ:SINGLE TRUE always triggers a new sweep)

4.5.15 SA:ACquisition:SIGid

Event:

Effect:	Enables/disables signal identification
Syntax:	SA:ACquisition:SIGid
Parameters:	<enabled>, option are TRUE, FALSE, 1 or 0

Query:

Effect:	Queries whether signal identification is enabled
----------------	--

Syntax:	SA:ACQuisition:SIGid?
Parameters:	None
Return value:	TRUE or FALSE

4.5.16 SA:TRACkIng:ENable

Event:

Effect:	Enables/disables the tracking generator
Syntax:	SA:TRACkIng:ENable
Parameters:	<enabled>, option are TRUE, FALSE, 1 or 0

Query:

Effect:	Queries whether tracking generator is enabled
Syntax:	SA:TRACkIng:ENable?
Parameters:	None
Return value:	TRUE or FALSE

4.5.17 SA:TRACkIng:PORT

Event:

Effect:	Sets the output port of the tracking generator
Syntax:	SA:TRACkIng:PORT
Parameters:	<port>, either 1 or 2

Query:

Effect:	Queries the output port of the tracking generator
Syntax:	SA:TRACkIng:PORT?
Parameters:	None
Return value:	1 or 2

4.5.18 SA:TRACkIng:LVL

Event:

Effect:	Sets the output power of the tracking generator
Syntax:	SA:TRACkIng:LVL
Parameters:	<output level>, in dBm

Query:

Effect:	Queries the selected output power of the tracking generator
Syntax:	SA:TRACkIng:LVL?
Parameters:	None
Return value:	output level in dBm

4.5.19 SA:TRACKing:OFFset

Event:

Effect:	Sets the offset frequency of the tracking generator
Syntax:	SA:TRACKing:OFFset
Parameters:	<offset>, in Hz

Query:

Effect:	Queries the selected offset frequency of the tracking generator
Syntax:	SA:TRACKing:OFFset?
Parameters:	None
Return value:	offset in Hz

4.5.20 SA:TRACKing:NORMalize:ENable

Event:

Effect:	Enables/disables normalization. If the span has changed since the last active normalization, a normalization measurement is also started.
Syntax:	SA:TRACKing:NORMalize:ENable
Parameters:	<enabled>, option are TRUE, FALSE, 1 or 0

Query:

Effect:	Queries whether tracking generator normalization is enabled
Syntax:	SA:TRACKing:NORMalize:ENable?
Parameters:	None
Return value:	TRUE or FALSE

4.5.21 SA:TRACKing:NORMalize:MEASure

Event:

Effect:	Triggers a new normalization measurement
Syntax:	SA:TRACKing:NORMalize:MEASure
Parameters:	None

4.5.22 SA:TRACKing:NORMalize:LVL

Event:

Effect:	Sets the reference level for the normalization
Syntax:	SA:TRACKing:NORMalize:LVL
Parameters:	<normalization level>, in dBm

Query:

Effect:	Queries the selected reference level for the normalization
Syntax:	SA:TRACKing:NORMalize:LVL?
Parameters:	None

Return value:	normalization level in dBm
----------------------	----------------------------

4.5.23 SA:TRACe:LIST

Query:

Effect:	Lists the names of all available traces
Syntax:	SA:TRACe:LIST?
Parameters:	None
Return value:	comma-separated list of trace name

Example

```
VNA:TRAC:LIST?
Port1,Port2
```

4.5.24 SA:TRACe:DATA

Query:

Effect:	Returns the data of a trace
Syntax:	SA:TRACe:DATA?
Parameters:	<trace>, either by name or by index
Return value:	comma-separated list of tuples [x, dBm]

Example

```
:SA:TRACE:DATA? PORT1
[9.75e+8,-100.351],
[9.7505e+8,-95.7394],
[9.751e+8,-97.5749],
[9.7515e+8,-96.9667],
[9.752e+8,-96.2391],
[9.7525e+8,-94.8761],
[9.753e+8,-96.0805],
[9.7535e+8,-95.7997],
[9.754e+8,-95.2021],
[9.7545e+8,-96.3472]
```

Note: actual response will not include newlines between data points, only at the end

4.5.25 SA:TRACe:AT

Query:

Effect:	Returns the data at a specific frequency (possibly interpolated)
Syntax:	SA:TRACe:AT?
Parameters:	<trace>, either by name or by index <frequency>, in Hz
Return value:	<dBm> or "NaN" if specified frequency is invalid

Example

```
:SA:TRAC:AT? Port1 1000000000
-96.424
```

4.5.26 SA:TRACe:MAXFrequency

Query:

Effect:	Returns the highest frequency contained in the trace
Syntax:	SA:TRACe:MAXFrequency?
Parameters:	<trace>, either by name or by index
Return value:	maximum frequency in Hz

4.5.27 SA:TRACe:MINFrequency

Query:

Effect:	Returns the lowest frequency contained in the trace
Syntax:	SA:TRACe:MINFrequency?
Parameters:	<trace>, either by name or by index
Return value:	maximum frequency in Hz

4.5.28 SA:TRACe:MAXAmplitude

Query:

Effect:	Returns the datapoint with the highest amplitude in the trace
Syntax:	SA:TRACe:MAXAmplitude?
Parameters:	<trace>, either by name or by index
Return value:	<frequency>,<dBm> of the highest amplitude point

Example

```
:SA:TRAC:MAXA? Port1
9.63e+8, -12.534
```

4.5.29 SA:TRACe:MINAmplitude

Query:

Effect:	Returns the datapoint with the lowest amplitude in the trace
Syntax:	SA:TRACe:MINAmplitude?
Parameters:	<trace>, either by name or by index
Return value:	<frequency>,<dBm> of the lowest amplitude point

4.5.30 SA:TRACe:NEW

Event:

Effect:	Creates a new trace
Syntax:	SA:TRACe:NEW

Parameters:	<trace name>
--------------------	--------------

4.5.31 SA:TRACe:RENAME

Event:

Effect:	Changes the name of a trace
Syntax:	SA:TRACe:RENAME
Parameters:	<trace>, either by name or by index <new name>

4.5.32 SA:TRACe:PAUSE

Event:

Effect:	Pauses (freezes) a trace
Syntax:	SA:TRACe:PAUSE
Parameters:	<trace>, either by name or by index

4.5.33 SA:TRACe:RESUME

Event:

Effect:	Resumes (unfreezes) a trace
Syntax:	SA:TRACe:RESUME
Parameters:	<trace>, either by name or by index

4.5.34 SA:TRACe:PAUSED

Query:

Effect:	Queries whether a trace is paused
Syntax:	SA:TRACe:PAUSED?
Parameters:	<trace>, either by name or by index
Return value:	TRUE or FALSE

4.5.35 SA:TRACe:PARAMeter

Event:

Effect:	Sets the measurement parameter that is stored in the trace
Syntax:	SA:TRACe:PARAMeter
Parameters:	<trace>, either by name or by index <parameter>, options are PORT ₁ and PORT ₂

Query:

Effect:	Queries the measurement parameter of a trace
Syntax:	SA:TRACe:PARAMeter?
Parameters:	<trace>, either by name or by index
Return value:	PORT ₁ or PORT ₂

4.5.36 SA:TRACe:TYPE

Event:

Effect:	Sets the storage type of a trace
Syntax:	SA:TRACe:TYPE
Parameters:	<trace>, either by name or by index <type>, options are OVERWRITE, MAXHOLD or MINHOLD

Query:

Effect:	Queries the storage type of a trace
Syntax:	SA:TRACe:TYPE?
Parameters:	<trace>, either by name or by index
Return value:	OVERWRITE, MAXHOLD or MINHOLD